



# B-Bop™



Model 76012

For 1 user / Ages 8 and up

## INSTRUCTION MANUAL

P/N 82399600 Rev.A

Now you can record, listen and share music with your friends with the B-Bop by Girl Tech. It's easy! Record off anything CD Player, computer even the television.


### BATTERY INSTALLATION

This game is powered by one (1) AAA (LR03) battery.

- Using a screwdriver, loosen the screw until the battery compartment door can be removed.
- Insert one (1) AAA (LR03) battery as indicated inside the battery compartment
- Replace the battery compartment door and tighten with a screwdriver. Do not over-tighten.

**ADULT SUPERVISION IS RECOMMENDED WHEN INSTALLING BATTERIES.**

### FEATURES:

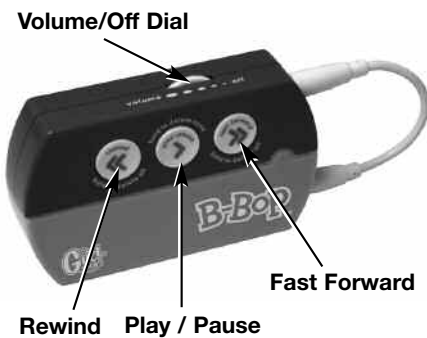

**Volume/Off Dial** – Use this to turn B-Bop on/off and to adjust the volume level

**Fast Forward** – Use this to advance to the next track.

**Note:** Hold down the Fast Forward and Rewind simultaneously to delete all song tracks from your B-Bop

**Play/Pause** – Use this to Play and Pause song tracks.

**Note:** Hold down the Play/Pause button to delete current song

**Rewind** – Use this to go to the previous song track.

E

**Note:** Hold down the Fast Forward and Rewind simultaneously to delete all song tracks from your B-Bop

### BOPPING WITH YOUR B-BOP

**1. Turning on your B-Bop** – Turn the Volume/Off dial to the left. You will see a flashing green light when your B-Bop is on.

**Please Note:** You will not be able to hear any music until you record music with your device.

#### 2. Recording Songs to your B-Bop

- Gently pull the left side of the Audio Cable labeled (Rec) away until you see a flashing red Light.
- Insert it into any audio headphone jack (computer, Radio, TV).
- Push the Play-Pause button on your device to record. (When recording the light will turn a solid red)
- Stop recording by pressing the Play/Pause Button. The flashing red light tells you your song has been recorded!
- To record multiple songs continue to press Play/Pause Button
- Your B-Bop will store 8 to 10 songs depending on the length of each song!

**Please note:** The memory is full when the red LED flashes very fast. There is a chance that there could be an incomplete song recorded.



When you're finished recording your favorite songs, plug the Audio cable back into your B-Bop. The flashing green light indicates that you are ready to listen to what you have recorded!

#### 3. Play Mode

- Plug your headphones into the headphone jack and place ear pieces in your ears
- Press Play to hear your songs!
- Press Fast Forward to advance to next track
- Press Play/Pause to pause. Press Play/Pause again to resume
- Press Rewind to listen to the previous track



**Please Note:**

#### 4. Deleting Music

- To delete the current song push and hold the Play/Pause button until you hear a single "blip" sound followed by a double "blip". After the double "blip" remove your finger from the Play/Pause button.

- To delete all music from your B-Bop hold the Fast Forward and Rewind button down together until you hear the double “blip” sound. (Approximately 2 seconds)

**Please note:** To delete music your B-Bop must be on

## SLEEP MODE FOR YOUR B-BOP

1. In Play Mode, the user presses the Play/Pause button and does no other action for longer than a minute.
2. In Play Mode, when all songs are completed and no button is pushed, the device will enter sleep mode after 1 minute.
3. In Record Mode, when all the memory has been used up and the unit stops and no other buttons are pushed for 1 minute.
4. In Record Mode, when the Play/Pause button is pushed and no other button is pushed for 1 minute.
5. Pushing any key on your B-Bop will cause it to wake up.

## CAUTION

- **As with all small batteries, the batteries used with this device should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.**
- **Be sure you insert the battery correctly and always follow the device and battery manufacturer's instructions.**
- **Do not dispose of batteries in fire.**
- **Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.**
- **Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.**
- **In an environment with radio frequency interference, the product may malfunction and require user to reset the product.**

## MAINTENANCE

- Handle this device carefully.
- Store this device away from dusty or dirty areas.
- Keep this device away from moisture or extreme temperature.
- Do not disassemble this device. If a problem occurs, turn this device off and on, or remove and replace the batteries to reset the device, or try new batteries. If problems persist, consult the warranty information located at the end of this instruction manual.
- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the device.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

**Please retain this for future reference.**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

## 90-DAY LIMITED WARRANTY

**(This product warranty is valid in the United States and Canada only)**

Radica Games Limited warrants this product for a period of 90 days from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 90-day warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: **Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA.** Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

**IMPORTANT:** Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

Distributed by:  
**RADICA USA Ltd.**  
 13628-A Beta Road  
 Dallas, TX 75244-4510



**RADICA®**

**GIRL TECH®**

B-BOP IS A TRADEMARK OF RADICA GAMES LTD.  
 ©2005 RADICA GAMES LTD.  
 PRODUCT SHAPE™  
 ALL RIGHTS RESERVED