

RADICA®




Model 72015
1 player / Ages 8 and up
INSTRUCTION MANUAL
P/N 82378100 Rev.A

Press the [Trigger] key to get out of the demo mode.

Let's go Huntin'!

There's nothing like bringin' home an 18-point buck to hang on your wall! With Buckmaster Huntin' II, you can go huntin' for that 18-pointer or just sharpen your skills with some target practice. Either way, Buckmaster Huntin' II gets you out in the field without having to worry about bad weather, permits, or bears. Oh wait...you still have to worry about bears!

BUTTON FUNCTIONS

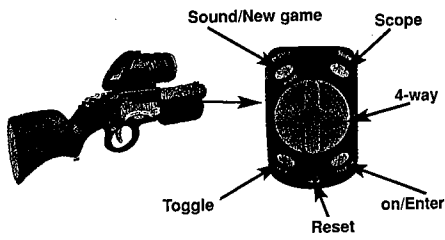

ON/ENTER - This button turns the game on and enters in your selections.

NOTE: If there is no activity for about one minute, the game will automatically go into SLEEP MODE. Press the ON/ENTER button to turn on the game or to continue your hunt.

DIRECTIONAL PAD (4-way) - When you're in OVERHEAD MODE, use the directional pad to walk around the different areas looking for deer. When you have a deer in your sight, move the directional pad to position the CROSSHAIRS. The pad is also used for menu navigation and game navigation.

TOGGLE - Use this button to toggle through various features such as WIND DIRECTION, DEER CALLS, BATTLE and HIGH SCORE.

SCOPE - When you are ready to fire, press this button to ZOOM IN on the deer or target.

SAFETY - Before you shoot, press this button to release the safety.

TRIGGER - When you have a deer in your sight, squeeze the trigger to bring 'em down!

SOUND/ NEW GAME - Press this button once to turn the sound on or off. Hold the button down to start a new game.

RESET - Using a blunt object, press this button to reset the game. Just be careful, this will erase your current game and high score.

RELOAD - After you shoot, slide this back and forth to reload.



TARGET PRACTICE

Press the ON/ENTER button to turn the game on. You will then be asked if you want to hunt or have target practice.

If you want to sharpen your skills before going hunting, then what you need is a little target practice! Using the DIRECTIONAL PAD, highlight "TARGET" and press the ON/ENTER button.

Round one will begin, and a deer target will appear. Using the DIRECTIONAL PAD, aim your gun by positioning the CROSSHAIRS over the TARGET AREA on the deer.

Press the SCOPE button to ZOOM IN on the target. When ZOOMED IN, you can use the DIRECTIONAL PAD to move the CROSSHAIRS as well. Once you you've lined up your shot, squeeze the trigger to shoot.

HUNTIN' TIP: Be sure to RELOAD before you shoot. If you haven't reloaded, "reload" will flash on the screen.


Your TARGET PRACTICE is divided into 5 rounds. You can only advance to the next round if you hit all targets without missing. You also only need to hit BUCK targets (you know, a male deer with antlers). If you hit a DOE target (a female deer without horns), it counts against you and you won't be able to go to the next round. So be sure by using your scope to check for antlers.

As you advance to the higher rounds, you'll be given more difficult moving targets, long distance targets, and does. Your target score is calculated by how fast you shoot your targets, so don't take too long lining up a shot.

HUNTIN' TIP: If you're having trouble with those long distance targets or moving targets, press the SCOPE button to ZOOM IN for a better shot.

If you think you're ready, let's go huntin'!

After you've finished target practice, or after pressing the ON/ENTER button, or after pressing the RESET button, you'll be asked if you want to HUNT or have TARGET practice. To go huntin' use the DIRECTIONAL PAD and highlight, "HUNT." Then press the ON/ENTER button.

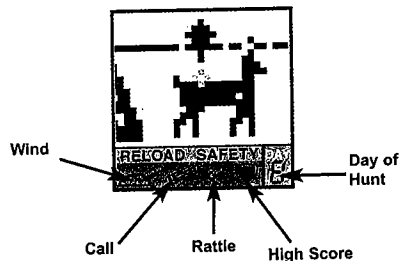

Next you'll be asked if you want a COVER SCENT. A cover scent is used to help hide your own scent so the deer can't smell you. If you want a COVER SCENT, use the DIRECTIONAL PAD to highlight, "YES." If you want a real challenge, use the DIRECTIONAL PAD to highlight, "NO."

Now you'll get your trusty rifle off the wall, climb aboard your four-wheeler, and head out to the hunting range.

OVERHEAD VIEW

Once you are out in the field, you'll see an OVERHEAD VIEW of you and the surrounding area.

Use the DIRECTIONAL PAD to move around and look for deer

HUNTIN' TIP: The biggest rule of hunting is, "safety first." So when you're in OVERHEAD VIEW, you'll have to have your gun switched to SAFETY. Just remember to switch if off when you're ready to shoot, or you might let that big buck get away!

Now, you can walk around the area looking for deer or you can use something to call them to you. Using the TOGGLE button, you can toggle to the DEER CALL or the ANTLERS. The DEER CALL makes the sound of a deer in the wild, while the ANTLERS rattled in some branches makes the sound of a deer marking his territory. Highlight either one of these and press the ON/ENTER button to use them. The deer just might come to you!

