




Model 74003
1 player / Ages 8 and up
P/N 82381200 Rev.B
INSTRUCTION MANUAL

THE LEGEND CAN BE YOU!

They say there's legendary fish in these lakes. Many have heard about them. A few have even seen them. But no one, absolutely no one has ever caught them—that is, until now! Now you can become the legend after you catch all 4 of these elusive beauties. Good luck! You're going to need it!

FEATURES:

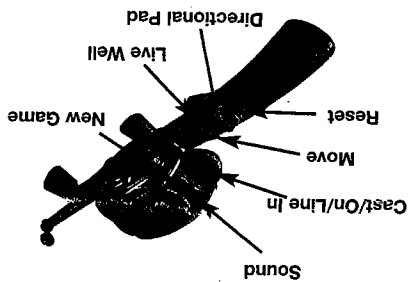

CAST / ON / LINE IN - Use this button to: Turn on the game Cast a line out Automatically retrieve fishing line

NOTE: If there is no activity for about 60 seconds, the game will automatically go into "sleep mode." Press the **CAST / ON / LINE IN** button to turn the game on again.

NEW GAME - Press and hold this button for 2 seconds to end your current game and bring you back to the Main Menu.

SOUND - This button toggles the sound ON and OFF.

REEL CRANK - Turn to reel in your line after a cast.

LIVE WELL - This shows you how many fish are currently in your Live Well. This also shows you the total weight of all the fish you've caught in the current mode.

MOVE - When your fishing line is in, this moves your boat to a different location.

RESET - Using a blunt object, press this button to reset the game. Just be careful, this will erase your current game and trophies.

DIRECTIONAL PAD - Use this to: Menu Mode - scroll through the choices (Left & Right), press Down to enter a selection

BAIT MODE - Scroll through your bait (Left & Right), press Down to enter a selection

FISHING MODE - Pull Rod left and right, using Up and Down to add or decrease drag respectively.

GETTING STARTED

Turn the reel or press reset to exit demo mode.

Press and hold the **NEW GAME** button until the Menu screen appears. Use the **DIRECTIONAL PAD**'s left and right directions to scroll through the four choices below. Then press Down to enter a selection.

TROPHY ROOM - After selecting the Trophy Room, use the Left / Right directions to view trophies for each lake. Choose a lake by pressing Down. You will then see:

Best Catch - The largest fish you've caught so far

Best Rank - The best you've ever ranked during a tournament

Total Fish - the amount of fish caught

Exit the selected lake by pressing Down again.

VIEW LEGENDS - Press Left or Right to scroll through all four legendary fish. Press Up or Down to exit.

RECREATION - Fish any of the four lakes. Catch as many fish as you can and each lake's legendary fish.

TOURNAMENT- Fish the same four lakes, but now you have a time limit and your fish count toward your high score.

RECREATION MODE

Using the Left and Right directions, highlight **RECREATION** in the main menu. Then move the **DIRECTIONAL PAD** Down to enter your selection.

Next, choose your lake. Move the **DIRECTIONAL PAD** Left and Right to select a lake. Press Down to enter your selection (See "THE LAKES AND THEIR FISH" below).

Once you're at the lake you can: **MOVE LOCATIONS** - While in the "overhead view" press the **MOVE** button.

CHANGE BAIT - While in "overhead view" press Left or Right to change bait.

LIVE WELL - Press and hold the **LIVE WELL** button to view fish you've caught.

Any time your Line is in, you may press the **MOVE** button to move your boat to a different part of the lake

MAKE THAT CAST!

Once you've positioned your boat and chosen a lure, it's time to cast!

Press and hold the **CAST / ON / LINE** button and cast as if you were casting an actual rod and reel. Pull your hand back, grip the handle tightly, and "whip" it forward.

Remember, the harder you cast, the farther your line and lure will go.

If your lure lands on the shore, slowly reel in your line until it hits water. However, you're probably going to "snag"

your hook on something. Making the same casting motion (but backwards), try to jerk it free. If your line breaks, you'll have to change your bait. Either way, it's best not to land your hook on the shore.

FIND THOSE FISH!

Once your lure is in the water, it's up to you to slowly reel it in until you get a bite. In this "sonar view," you can see where your lure is in relation to the surrounding fish.

Just be very careful not to snag your lure on an obstacle near the bottom of the lake. If you do, your line may break and you'll lose your bait. Just like on land, you may be able to jerk your line free, but the bottom line is: avoid snagging anything but a fish!

NOTE: For the best chance at getting a "bite", try to position your lure just in front of the fish.

If you get a bite, you must quickly "set the hook" by jerking the Rod and Reel backwards. When fish "bite" the lure, the rod will vibrate.

NOW REEL 'EM IN!

Once you've hooked a fish, it's up to you to reel it in without breaking your line and losing your bait AND the fish! Keep an eye on that Tension Meter! If the tension is too high, try reeling in slower. If the fish jumps, jerk the Rod and Reel to keep from losing it.

You may also adjust the Drag by moving the **DIRECTIONAL PAD** up and down while you reel. Push the **DIRECTIONAL PAD** Left and Right to help pull the fish Left and Right. That is, if the fish goes to the left, you have to press left, otherwise the line will break and the fish is let loose. It is same case for the fish go to right.

Everything needs to be just right. Too much tension, and your line will break. Too little tension, and the fish will get away. The more you practice, the better you'll be.

TOURNAMENT MODE

Now it's time to test your skills in a fishing tournament!

Using the Left / Right directions, highlight **TOURNAMENT** in the main menu. Then move the **DIRECTIONAL PAD** Down to enter your selection.

